

Instruction Guide

3500 / 3500A Loading Software with Software Loader CD-ROM

OVERVIEW

The following equipment is needed in order to load system software into the Test Set:

- AC Power Cable
- External DC Power Supply
- Comm Breakout Box
- Ethernet Crossover Cable
- Software Loader CD-ROM (see Step 1)
- Personal Computer (PC)
 - 700 MHz x86 Processor
 - 384 MB System Memory (RAM)
 - VGA Graphics Card (1024x768 resolution)
 - CD-ROM Drive
 - Network Card

SETUP

STEP	PROCEDURE
1.	Burn the file "ReleasexxxFirmwareLoader.iso" (where "xxx" refers to revision level of software) to a CD-ROM using an ISO image CD-ROM burner application (don't just copy this file to a CD-ROM).
2.	Connect the External DC Power Supply to the Test Set (DC IN Connector).
3.	Connect the AC Power Cable from the External DC Power Supply to an appropriate AC power source.
4.	Ensure the Test Set is ON.
5.	Connect the Comm Breakout Box to the Test Set REMOTE Connector.
6.	Connect the Ethernet Crossover Cable from the Comm Breakout Box (ETHERNET Connector) to the PC (Ethernet Port).
7.	Place the Software Loader CD-ROM into the PC and reboot the PC. NOTE: Often the BIOS on the PC needs to be reconfigured to boot from the CD-ROM.
8.	Follow the instructions displayed on the PC. Allow several minutes for the PC to reboot from the CD-ROM.